


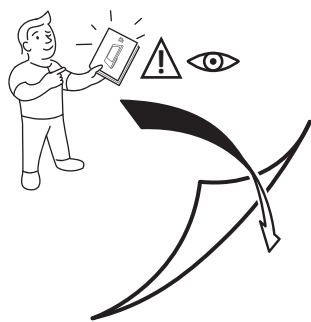
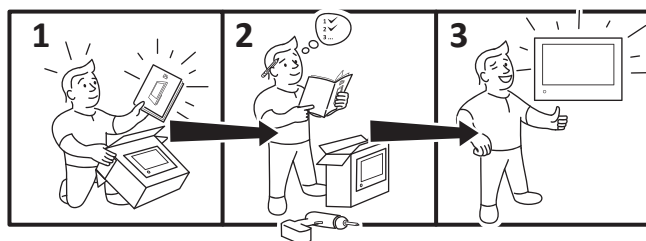
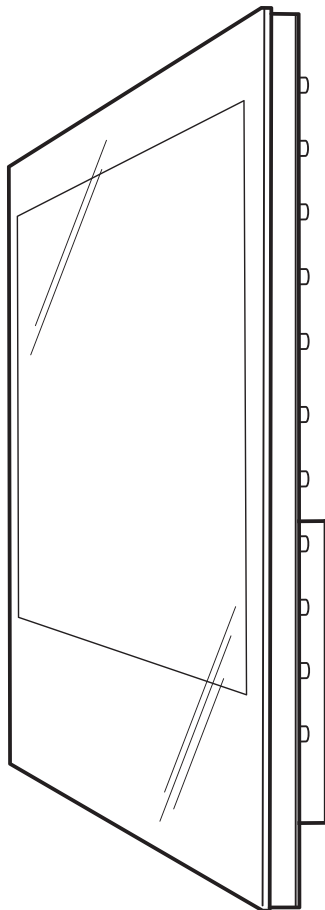
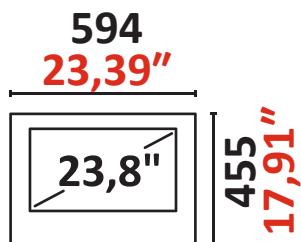
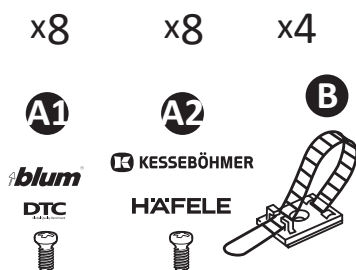
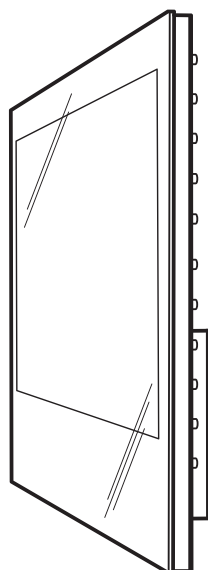


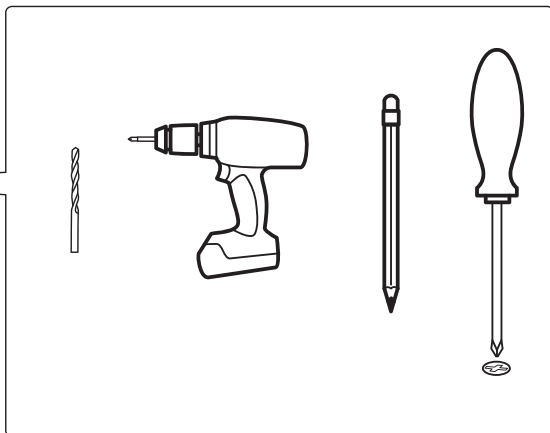

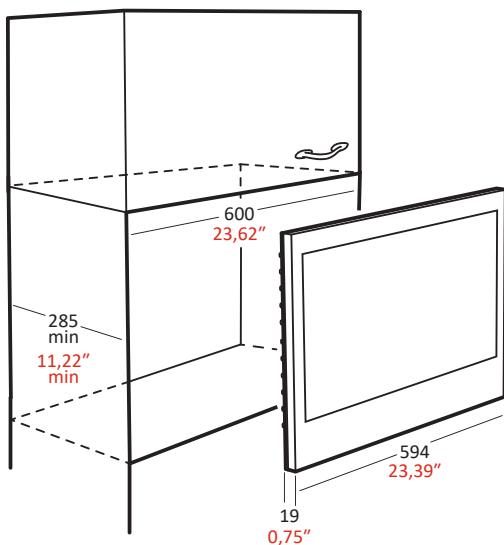


1

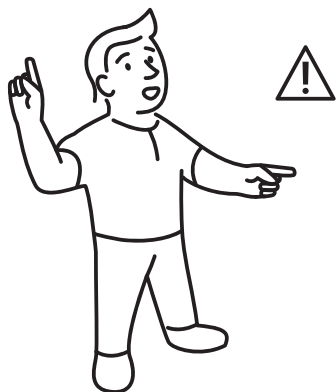

2



A

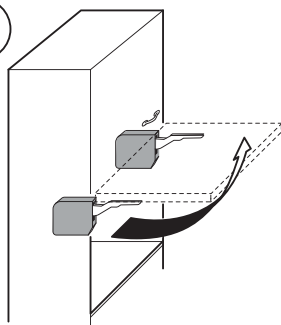

1

DTC
DTC TOP STAY SF
SF00AH02A



2

blum
Aventos HK TOP29
22K2910
+




3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F



B

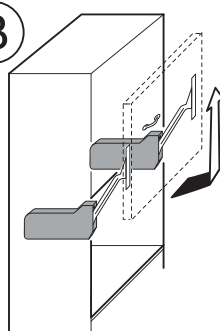

KESSEBÖHMER
FREEslide Q3us/Q4us




HÄFELE
Free Up Q3us/Q4us






A1

DTC
Global Quality Benchmark

DTC TOP STAY SF

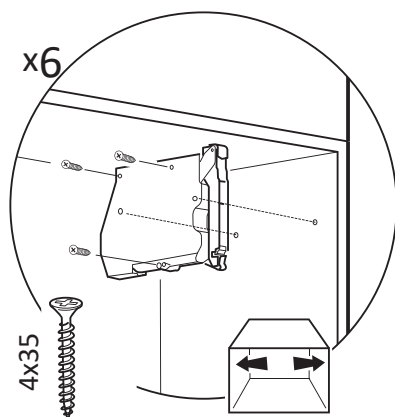
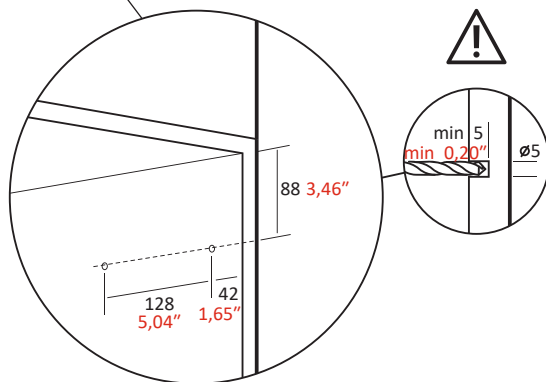
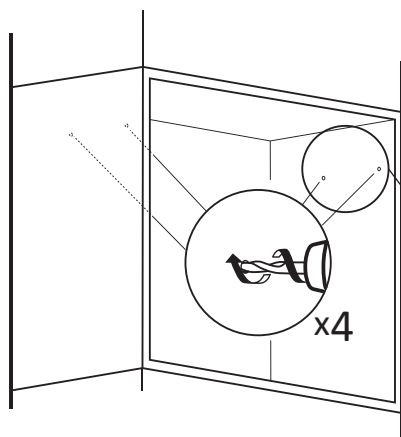


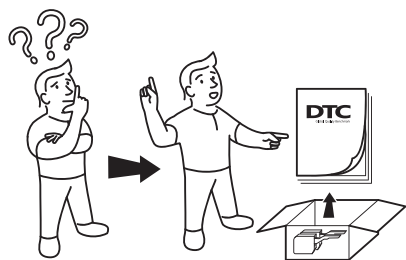
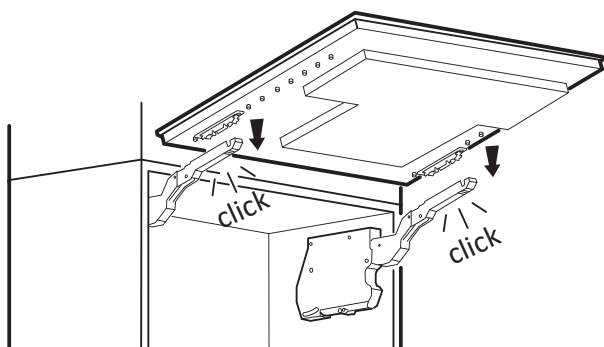
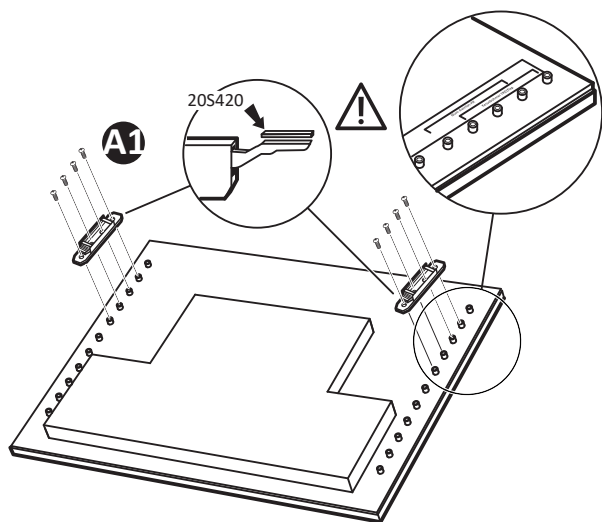


A2

blum

Aventos HK TOP29

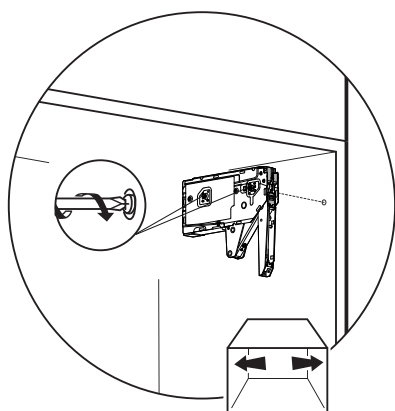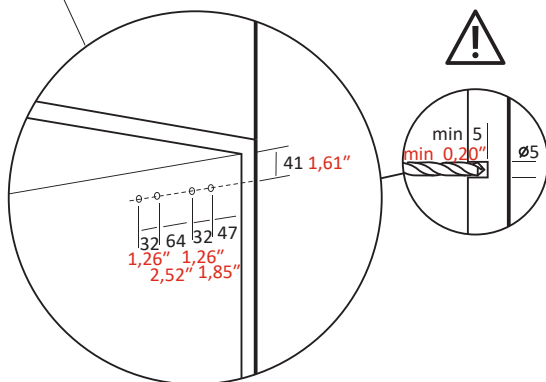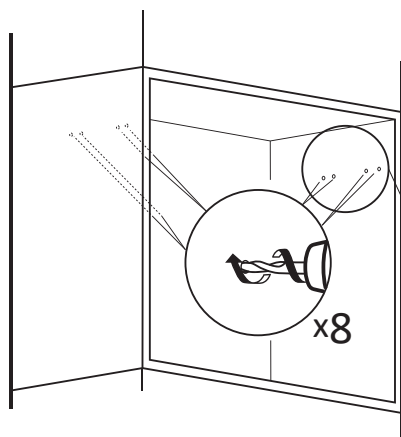


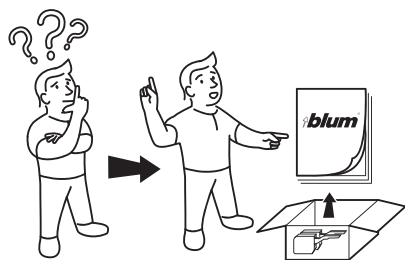
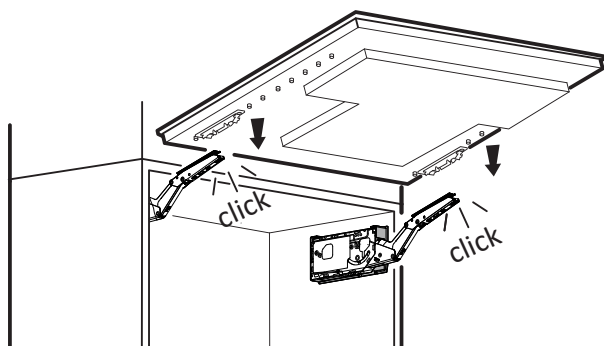
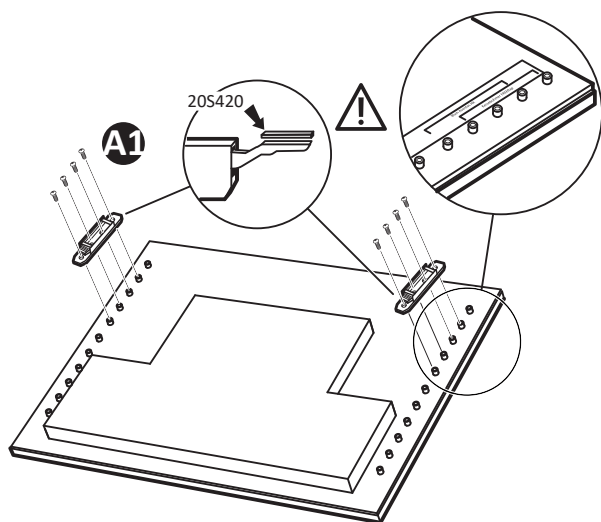


A3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F

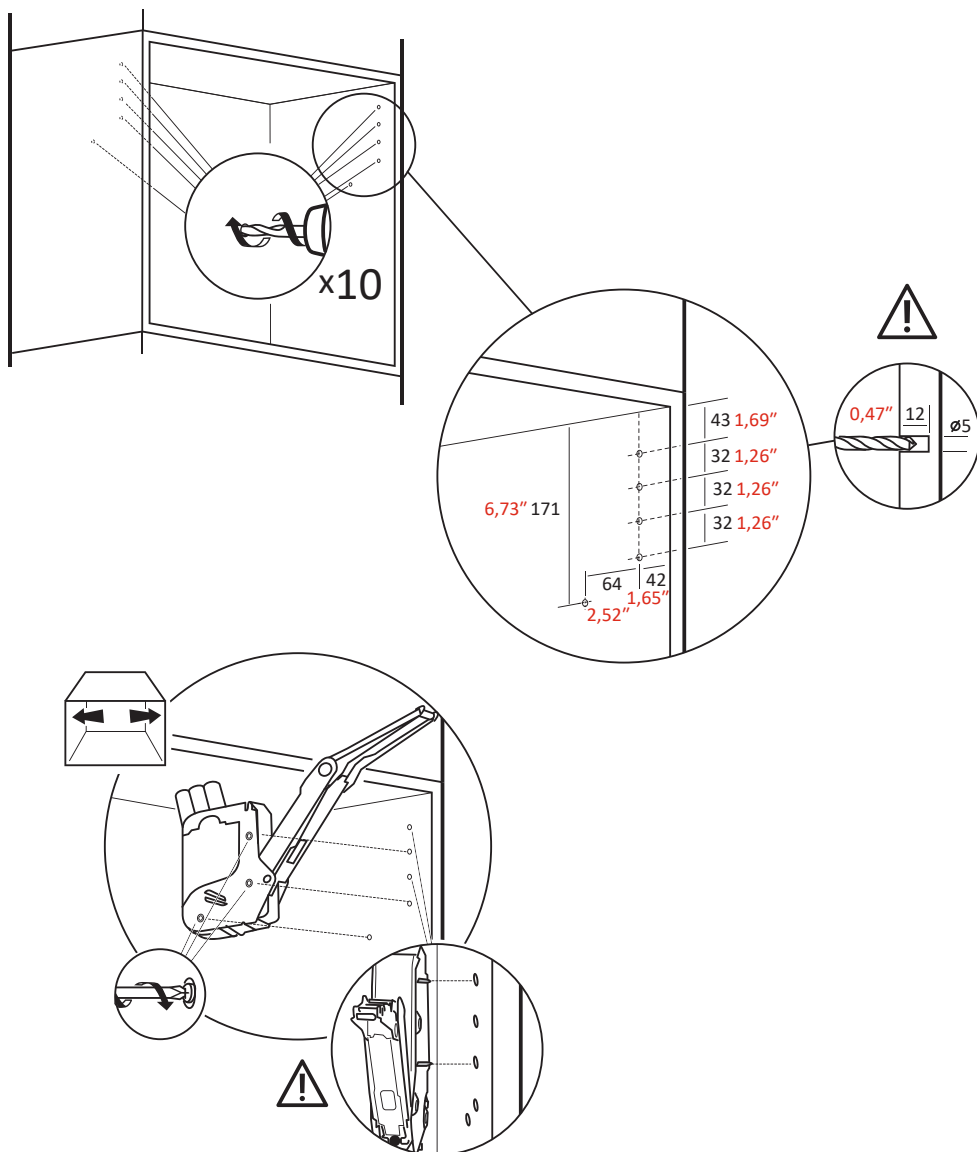

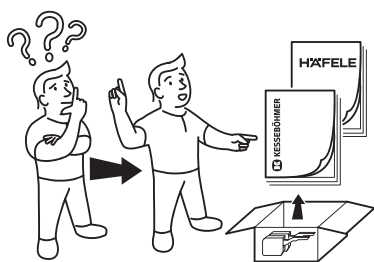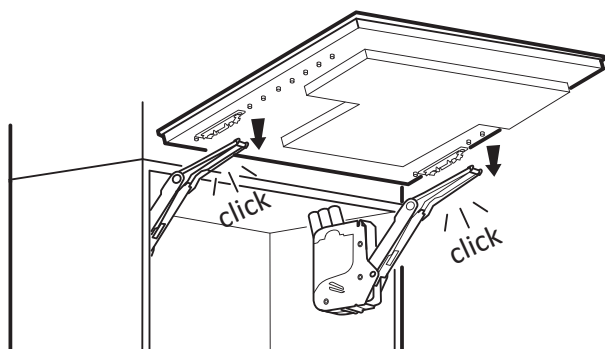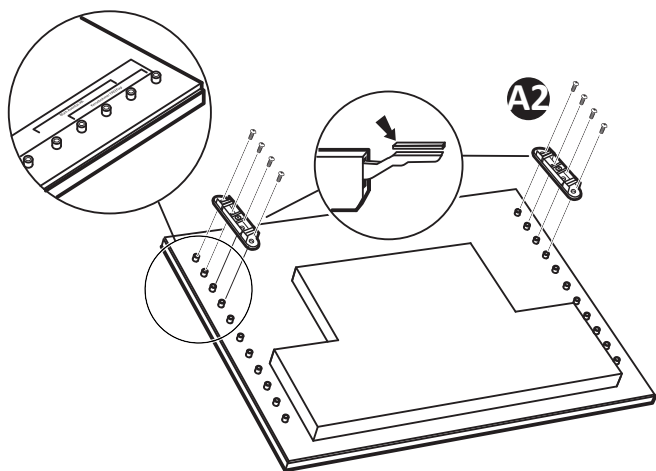





B





KESSEBÖHMER

HÄFELE

FREEslide Q3us/Q4us

Free Up Q3us/Q4us

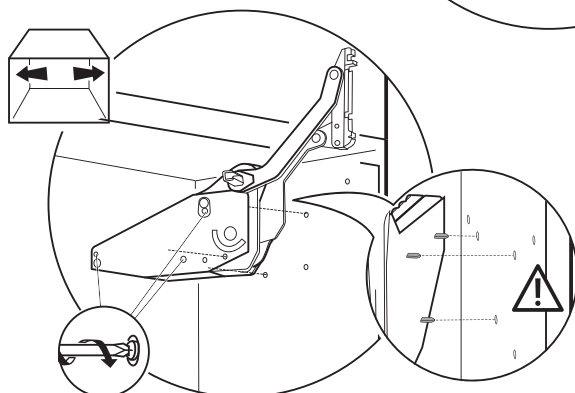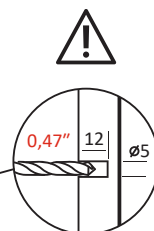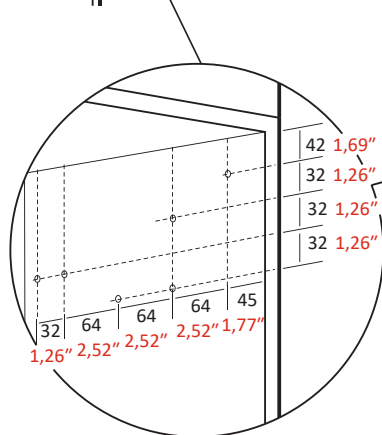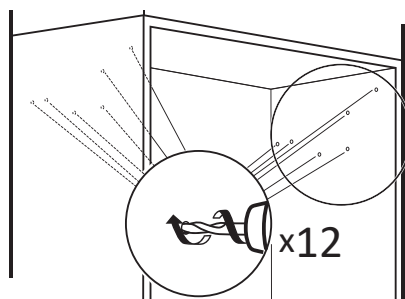


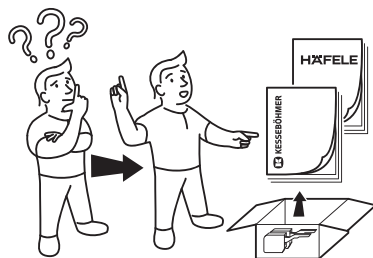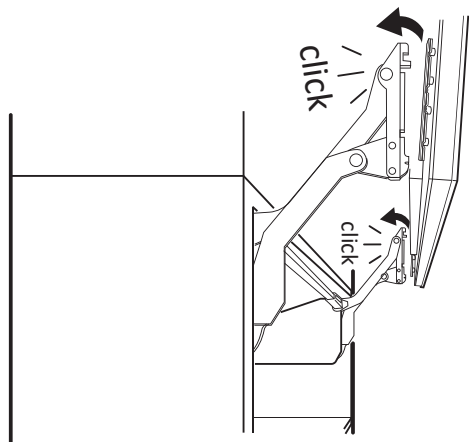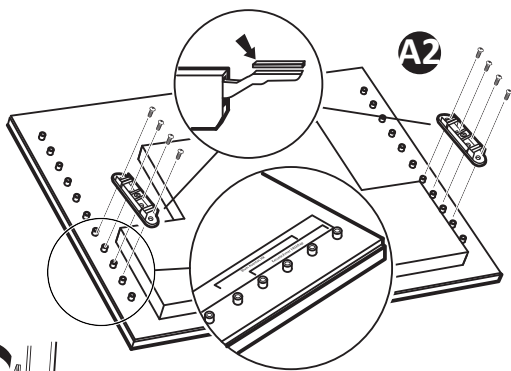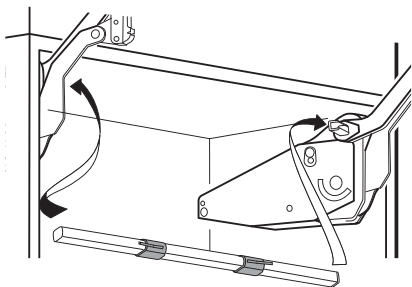


3




A

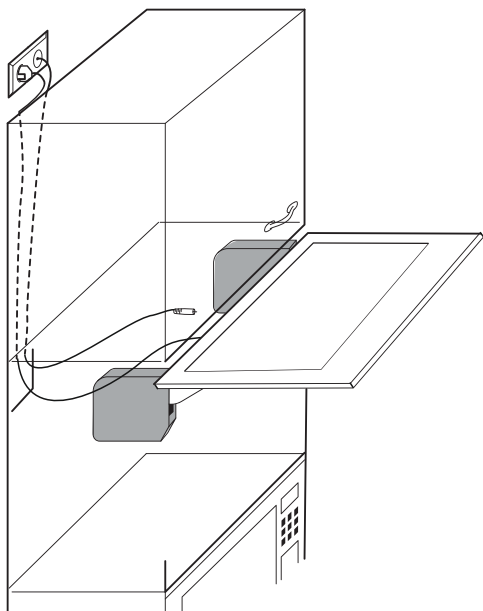



B

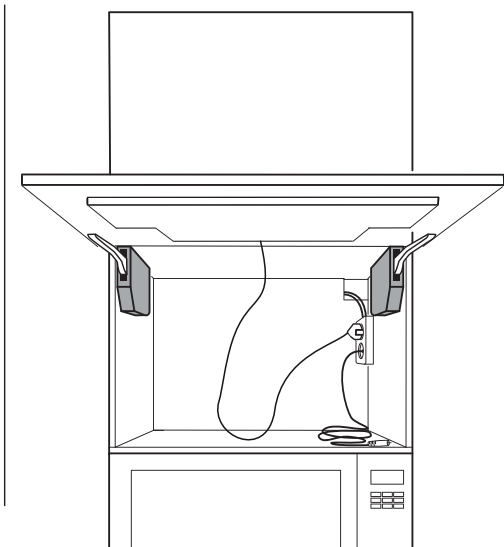



4

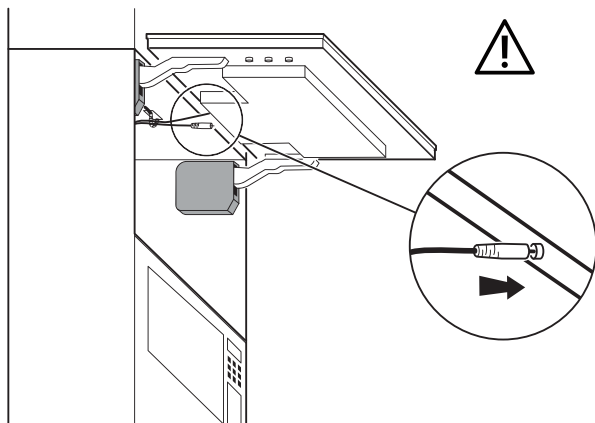

5

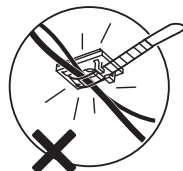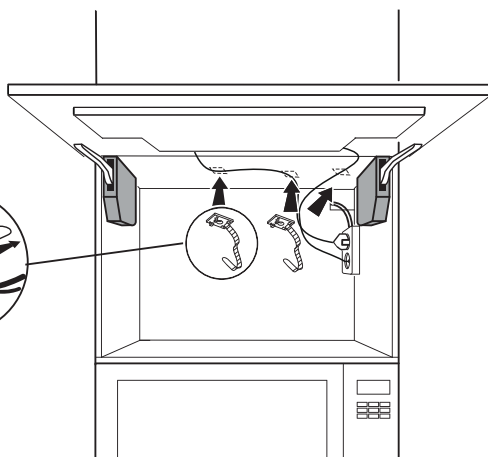

6

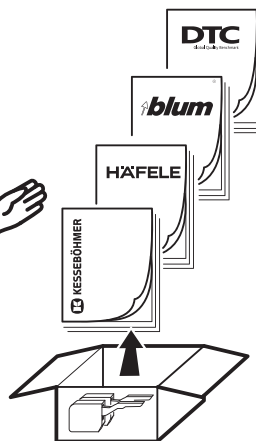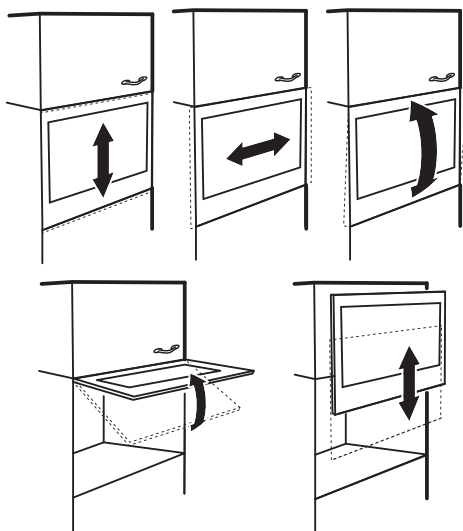

7

A

